

## Touch Latch

SEL-PRT-02649 | Rev. 1

### Part 2 Enhancement Installation

SUITABLE FOR  
EI30 Concealed Frame  
EI30 Shadow-Gap  
EI30 Visible Trim  
NFR Concealed Frame  
NFR Shadow-Gap  
NFR Visible Trim




### SYSTEM PREPARATION



When using the **Touch Latch** you must remove the **Remote Stop** from the **Sliding Track**.

A **25mm** space between the rear of the Door and the **rear stud** is required.

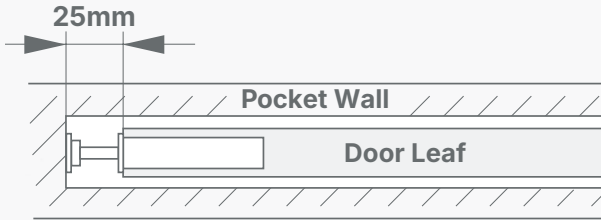

#### 1. DRILL DOOR LEAF

The **Touch Latch** is fitted to the rear of the door using a **25mm** auger or spade bit.



#### 2. FIX LATCH TO DOOR

Insert the **Touch Latch** and fix into place using the Screws provided.



#### 3. FIX COUNTER PLATE

Fix the metal **Counter Plate** to the corresponding rear stud.

**IMPORTANT** Ensure the height corresponds to the height of the Touch Latch in the Door. When using the NFR concealed kit this will need to be packed out.