

# Sliding Gear Set SG01

SEL-PRT-02668 | Rev. 3

## Part 2 Enhancement Installation



### SG01 COMPONENTS



This guide is to be used in conjunction with the specified Pocket Door Frame and Trim installation guides.

Familiarize yourself with components included. All fixings will come pre-packaged to suit your specific project requirements.



### INSTALLING SLIDING TRACK

Line the **Top Track** with the pilot drilled holes and fix using **Type-03 Screws**.

**Only use the silver Type-03 Screw provided to secure the Track into place.** Use of a larger Screw will prevent the Remote Stop from sliding freely within its groove. It will be necessary to slide the Remote Stop back and forth to access all the fixing holes in the Track.

**IMPORTANT**  
Do NOT fix the Remote Stop in place at this stage.



### INSTALLING THE WHEELS

Please ensure the securing nut is attached to the Bolt.

Wind the **Roller Bolts into the Wheels** several turns, then slide into the **Track** as shown.

Adjust the Bolts so that they are approximately **25/32"** below the track.



### POCKET PACKER

In order to support the Pocket sides before drywalling, insert the cardboard **Pocket Packer** into the Pocket as shown.

#### IMPORTANT

The cardboard **Pocket Packer** must be used to stop the side walls bowing when fixing drywall to the Pocket.



### DRYWALL ONE SIDE

Drywall **one side** of the Pocket using the **Type-05** self drilling Screws provided. **Ensure the Leading Edge Jamb**s remain completely vertical and plumb.

Only one side is boarded to allow access to the **Track** to adjust Door positions etc. Use a damp cloth to **clear any swarf/debris** from the **Top Track** and **Bottom Channel**.



### FIT HEAD BRACKETS

Fit the **Head Brackets**, **5 29/32"** from the edge of the Door leaf to the **center** of the Bracket.

Ensure both Brackets are the same way up. Use **Type-03 Screws**.



### HANG THE DOOR

Hang the door on the Brackets as shown (rear of the Door followed by the front).

Wind the Nuts down by hand to **temporarily hold the Door in place**. This can be finally adjusted later.



### DRYWALL OTHER SIDE

#### **Touch Latch** (if supplied)

Slide the Door into the Pocket (once clean from debris) to ensure the Latch meets the metal Plate on the rear stud. If it doesn't, re-position the Plate so the magnet attaches.


Check the function of the door then drywall the remaining side to fully enclose the Pocket. **Ensure that the upright Jambes are kept level and plumb.**

# ENIGMA<sup>®</sup>

POCKET DOORS

Highly durable, low maintenance,  
elegant pocket doors.

[www.enigmapocketdoors.com](http://www.enigmapocketdoors.com)

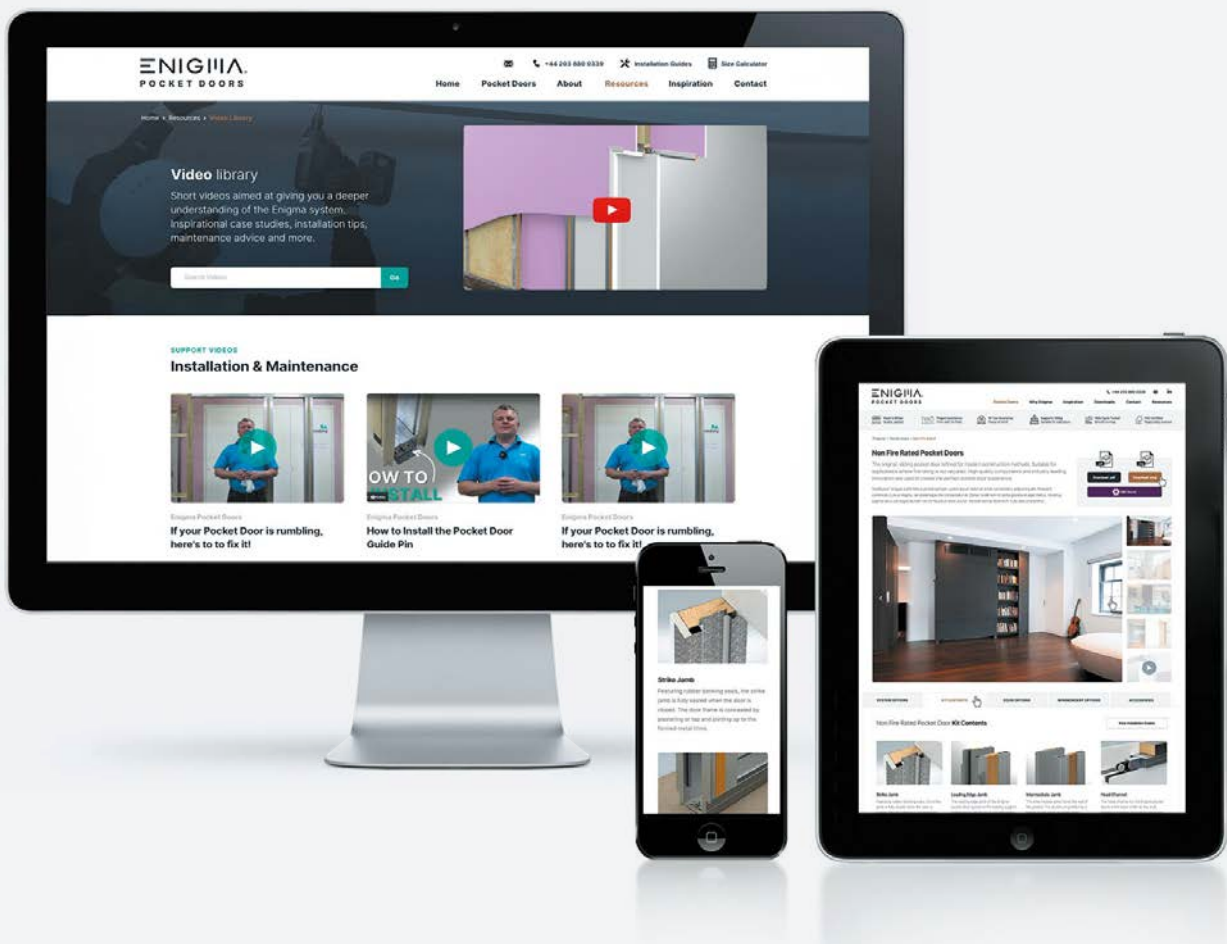

halo  
assist

INNOVATION BY SELO.

Installation support **+18443 (ENIGMA) 364462**

Email [support@enigmapocketdoors.com](mailto:support@enigmapocketdoors.com)