

Sliding Gear Set SG02

SEL-PRT-02671 | Rev. 3

Part 2 Enhancement Installation



SG02 COMPONENTS



This guide is to be used in conjunction with the specified Pocket Door Frame and Trim installation guides.

Familiarize yourself with components included. All fixings will come pre-packaged to suit your specific project requirements.




INSTALLING SLIDING TRACK

Line the **Top Track** with the pilot drilled holes and fix using **Type-03 Screws**.

Only use the silver Type-03 Screw provided to secure the Track into place. Use of a larger Screw will prevent the Remote Stop from sliding freely within its groove. It will be necessary to slide the Remote Stop back and forth to access all the fixing holes in the Track.

IMPORTANT
Do NOT fix the Remote Stop in place at this stage.

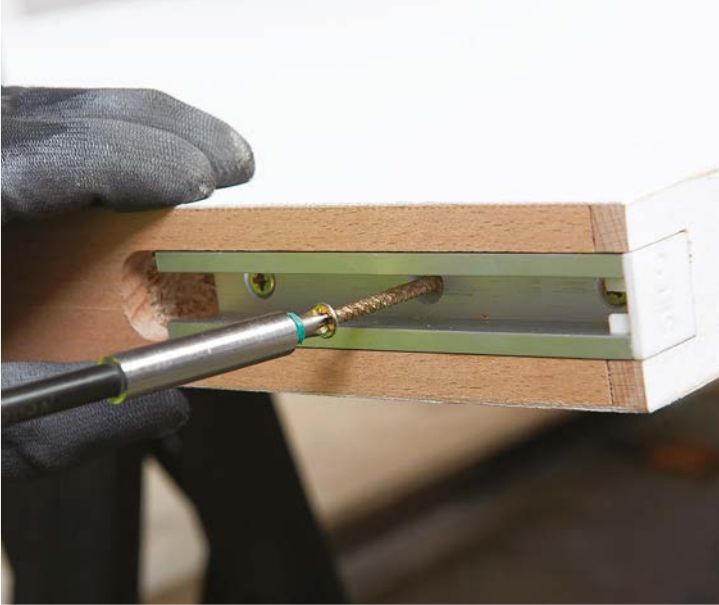

FIX HEAD BRACKET CHANNELS

Using the plastic end cap as a spacer (front Channel only), fit the **Head Bracket Channels** flush with the edge of the Door into the rebates provided, fix using **Type-03 Screws**.

The longer Bracket is to be used towards the **front** of the Door.



POCKET PACKER

In order to support the Pocket sides before drywalling, insert the cardboard **Pocket Packer** into the Pocket as shown.

IMPORTANT

The cardboard Pocket Packer must be used to stop the side walls bowing when fixing drywall to the Pocket.



DRYWALL ONE SIDE

Drywall **one side** of the Pocket using the **Type-05** self drilling Screws provided. **Ensure the Leading Edge Jamb's remain completely vertical and plumb.**

Only one side is boarded to allow access to the **Track** to adjust Door positions etc. Use a damp cloth to **clear any swarf/debris** from the **Top Track** and **Bottom Channel**.



PREPARE THE HANGING BRACKETS

If the Bolts have been supplied with Nuts then these need to be removed as the Nuts are not needed for this kit.

Force the **Hanger Bolt** into the **Gear Bracket** using a mallet or hammer. This will hold the Bolt captive in the Bracket, then wind several turns into the Trolley and insert into the Track.



HANG THE DOOR

A. Slide the rear Bracket into the head of the Door, fix through the bottom holes with two **Type-02** Screws.

B. Slide the front Bracket into place and tighten the hex-head Bolt. Fit the Bracket end cap (can be removed and refitted for painting).

Ensure the Door is **plumb and level**. To adjust the heights, remove the Brackets and rotate them clockwise to raise, anti-clockwise to lower.



DRYWALL OTHER SIDE

Touch Latch (if supplied)

Slide the Door into the Pocket (once clean from debris) to ensure the Latch meets the metal Plate on the rear stud. If it doesn't, reposition the Plate so the magnet attaches.


Check the function of the door then drywall the remaining side to fully enclose the Pocket. **Ensure that the upright Jambes are kept level and plumb.**

ENIGMA[®]

POCKET DOORS

Highly durable, low maintenance,
elegant pocket doors.

www.enigmapocketdoors.com

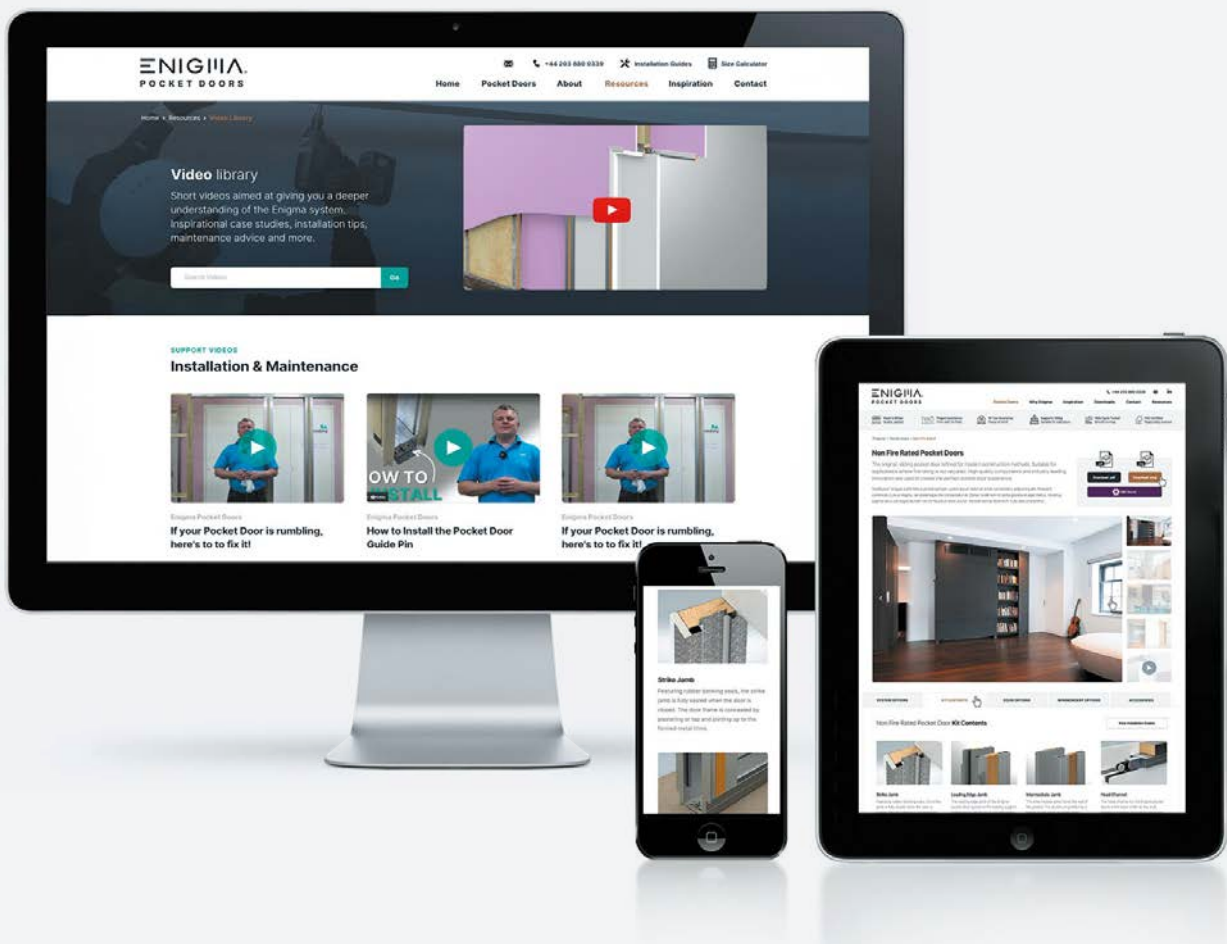

halo
assist

INNOVATION BY SELO.

Installation support **+18443 (ENIGMA) 364462**

Email support@enigmapocketdoors.com